


Деталировка и лист запасных частей FROSP F9140

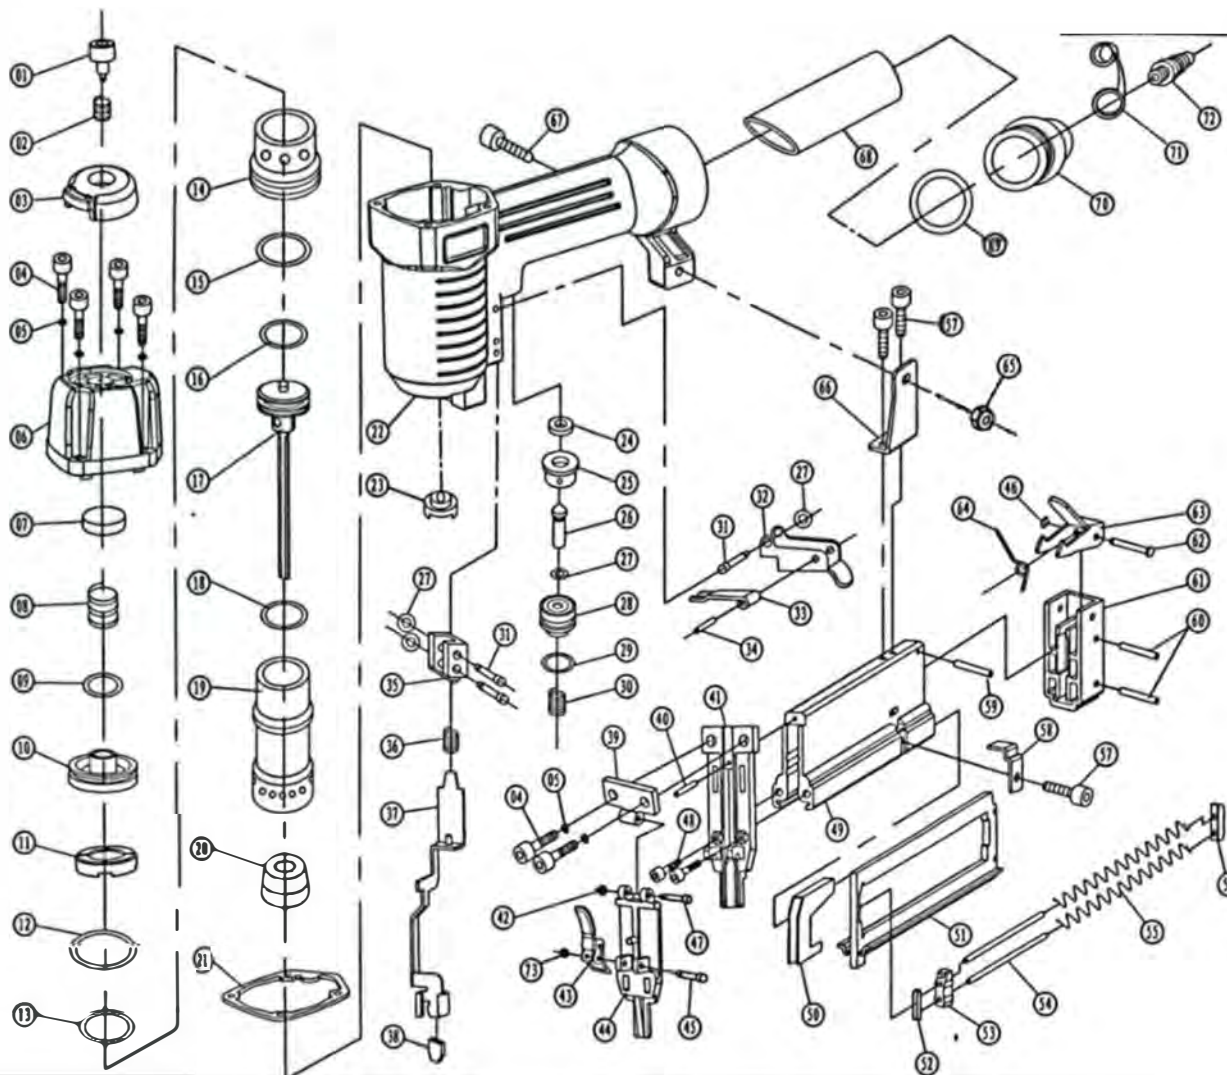

No.	Description	No.	Description	No.	Description
1	Screws	25	Valve seat	49	Fixed magazine
2	Reversing pressure spring	26	Valve stem	50	At the end
3	Air commutator	27	●-ring 1.7*2	51	Guide pin holder assembly
4	Screw M5*20	28	Valve bush	52	Locator piece I
5	Spring washer 5	29	O-ring 11.2*2	53	Guide block
6	Cylinder head	30	Lever compression spring	54	Guide bar
7	Seal washer	31	Axle pin	55	Head compression spring
8	Balancing valve pressure spring	32	trigger	56	Spacer II
9	O-ring 13.7*2.4	33	Safety damper	57	Screw M4 x 7
10	Balance valve	34	Pin 2.5*16	58	Stop plate
11	Cushion gasket	35	Slide rack	59	Pin 3*18
12	O-ring 31.2*2.5	36	Ejector spring	60	Pin 3*22
13	O-ring 24.8*3.5	37	Safety frame assembly	61	Locating seat
14	Tightening ring	38	Safety muzzle	62	Axle pin
15	O-ring 41.7*3	39	septum	63	Shank of hook
16	O-ring 21.3*3	40	Pin 2*10	64	Torsional spring
17	Piston assembly	41	nailhead	65	Nut M4
18	O-ring 26.2*2.4	42	Pin bush	66	Fixed seat
19	Air cylinder	43	Tensioning lever assembly	67	Screw M4 x 14
20	cushion	44	Cover plate	68	Gun handle sheath
21	Sealing gasket	45	Limit pin black	69	O-ring 36.3*3.55
22	Gun body	46	Open stop ring 2.5	70	End cover
23	Rubber mat	47	Cover pin	71	Connector protective sleeve
24	Rectangular sealing ring 12.9*7*1.8	48	Screw M4 x 15	72	Pipe joint
				73	O-ring 1.9*1.2