


Деталировка и лист запасных частей

TOUA GSN65

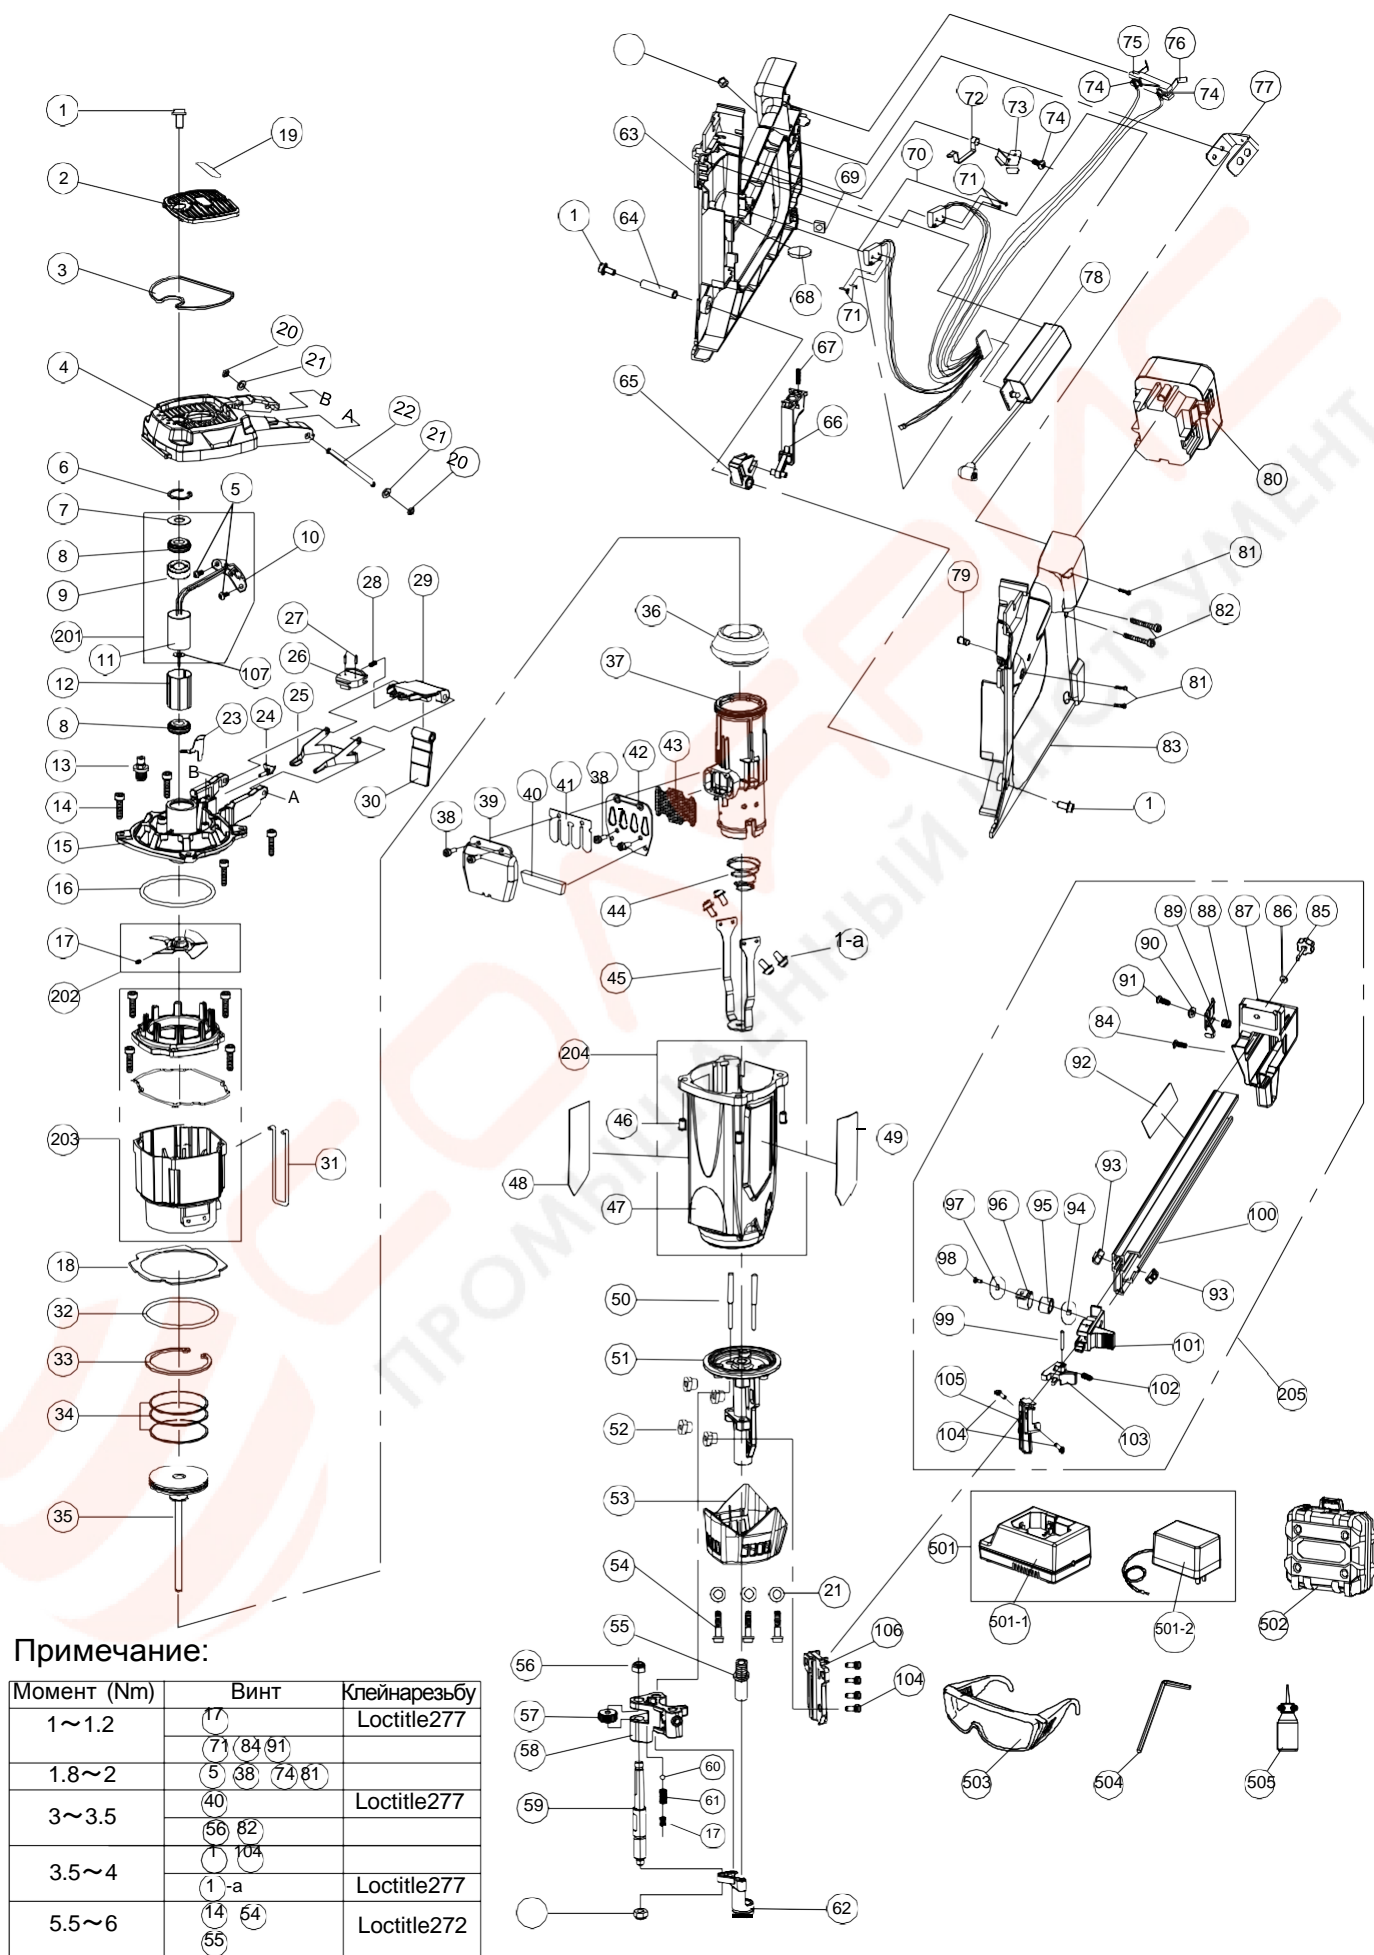

Примечание:

| Момент (Nm) | Винт | Клейнарезьбу |
|-------------|--------------------|--------------------------|
| 1~1.2 | 17 71 (84,91) | Loctite277 |
| 1.8~2 | 5 38 74 81 | |
| 3~3.5 | 40 56 82 | Loctite277 |
| 3.5~4 | 104 | |
| 5.5~6 | 1-a 14 54 55 | Loctite277 Loctite272 |

| No. | Артикул. | Наименование | Кол. |
|-----|---------------------|---------------------------|------|
| 1 | 504.3.01.01.0510.01 | Hex Bolt M5x10 | 7 |
| 2 | 504.2.01.0001.02.01 | Top Cover | 1 |
| 3 | 504.2.04.0001.02.01 | Filter | 1 |
| 4 | 504.2.01.0002.02.01 | Filter Cover | 1 |
| 5 | 504.3.01.05.0410.06 | Cross Recessed Bolt M4x10 | 2 |
| 6 | 504.3.05.01.2400.01 | Retaining Ring d0=24 | 1 |
| 7 | 504.1.01.0002.01.00 | Gasket | 1 |
| 8 | 504.2.03.0001.01.00 | Rubber Gasket | 2 |
| 9 | 504.2.01.0024.01.01 | Washer | 1 |
| 10 | 503.1.17.001.01.01 | Motor PCB Board Assembly | 1 |
| 11 | 504.4.01.001.01 | Motor | 1 |
| 12 | 504.2.01.0003.20.00 | Mount Sleeve | 1 |
| 13 | 504.2.04.0002.01.00 | Spark Plug | 1 |
| 14 | 504.3.01.01.0520.01 | Hex.Socket HD M5 x20 | 4 |
| 15 | 504.1.02.0001.03.04 | Cylinder Head | 1 |
| 16 | 504.2.03.0002.02.01 | O-Ring 63x3.53 | 1 |
| 17 | 504.3.01.02.0405.01 | Holding Screw M4 x5 | 2 |
| 18 | 504.2.03.0016.01.01 | Chamber clapboard | 1 |
| 19 | 505.03.026.00.999 | Top Name Plate | 1 |
| 20 | 504.2.03.0004.01.01 | O- Retaining Ring 3.5 x2 | 2 |
| 21 | 504.3.04.01.0500.01 | Washer d=5 | 5 |
| 22 | 504.1.04.0004.01.02 | Shaft | 1 |
| 23 | 504.1.01.0031.02.00 | High Pressure Wire Platen | 1 |
| 24 | 504.2.01.0004.01.00 | Adapter | 1 |
| 25 | 504.1.01.0004.01.02 | Cell Lever | 1 |
| 26 | 504.2.01.0005.01.01 | Latch | 1 |
| 27 | 504.3.06.01.0208.01 | Spring Straining Pin 2 x8 | 2 |
| 28 | 504.1.04.0014.01.02 | Latch Spring | 1 |
| 29 | 504.2.01.0006.01.01 | Cell Cover | 1 |
| 30 | 504.2.03.0005.01.01 | Cell Rubber | 1 |
| 31 | 504.1.01.0005.02.00 | Lock Bar | 1 |
| 32 | 504.2.03.0007.02.01 | O-Ring 70x3.53 | 1 |
| 33 | 504.3.05.01.6200.01 | Retaining Ring d0=62 | 1 |
| 34 | 504.1.04.0005.02.00 | Piston Ring 60X0.6 | 3 |
| 35 | 503.1.03.002.03.00 | Piston Assembly | 1 |
| 36 | 504.2.03.0008.02.01 | Piston Bumper | 1 |
| 37 | 504.1.02.0004.03.04 | Cylinder | 1 |
| 38 | 504.3.01.01.0410.01 | Hex.Socket HD.Bolt M4x10 | 4 |
| 39 | 504.1.01.0006.01.00 | Buffer Cover | 1 |
| 40 | 504.1.01.0007.01.00 | Muffler | 1 |
| 41 | 504.1.01.0008.01.00 | Lead Valve | 1 |
| 42 | 504.1.01.0009.01.05 | Read Plate | 1 |
| 43 | 504.1.01.0010.01.00 | Exhaust Baffle | 1 |
| 44 | 504.1.04.0015.02.02 | Pushing Arm Spring | 1 |
| 45 | 504.1.01.0013.05.02 | Pushing Arm | 1 |
| 46 | 504.1.04.0009.01.00 | Nut M5 | 4 |
| 47 | 504.2.01.0007.02.04 | Housing | 1 |
| 48 | 505.02.003.00.999 | Name Plate | 1 |
| 49 | 505.01.003.00.999 | Specification Plate | 1 |
| 50 | 504.1.04.0028.01.04 | Guide Bar | 2 |
| 51 | 504.1.03.0203.02.02 | Nail Seat | 1 |
| 52 | 504.1.04.0031.01.02 | Guide nut | 4 |
| 53 | 504.2.04.0004.03.01 | Protect Cover | 1 |
| 54 | 504.3.01.01.0525.01 | Hex.Socket HD M5x25 | 3 |
| 55 | 504.1.04.0022.02.02 | Nailer Mouth | 1 |
| 56 | 504.3.03.02.0500.01 | Locknut M5 | 4 |
| 57 | 504.2.01.0038.01.04 | Adjusting knob | 1 |
| 58 | 504.1.03.0008.01.02 | Knob seat | 1 |
| 59 | 504.1.04.0010.02.04 | Adjustment screw | 1 |

| No. | Артикул. | Наименование | Кол. |
|-------|---------------------|---------------------------------|------|
| 60 | 504.3.07.01.0300.00 | Steel ball | 1 |
| 61 | 504.1.04.0025.02.02 | Ball spring | 1 |
| 62 | 504.1.03.0001.03.02 | Pushing arm | 1 |
| 63 | 504.2.02.0001.03.04 | Right Handle | 1 |
| 64 | 504.1.04.0012.02.02 | Rotating shaft | 1 |
| 65 | 504.2.01.0010.01.01 | Lock block | 1 |
| 66 | 504.2.01.0011.02.01 | Trigger | 1 |
| 67 | 504.1.04.0016.01.02 | Trigger spring | 1 |
| 68 | 505.16.001.00.999 | Fuel cell sponge | 1 |
| 69 | 504.3.03.02.0600.00 | Square nut M6 | 1 |
| 70 | 503.1.11.001.03.00 | Mehradler Plug Assembly | 1 |
| 71 | 504.3.01.03.0211.02 | Screw ST2.2x11 | 4 |
| 72 | 504.1.01.0018.02.00 | Switch spring | 1 |
| 73 | 504.1.01.0019.01.00 | Wiring cover | 1 |
| 74 | 504.3.01.03.0307.01 | Screw ST2.9x8 | 3 |
| 75 | 504.2.01.0013.01 | Internal wire board | 1 |
| 76 | 504.1.01.0020.01.03 | Battery terminal | 2 |
| 77 | 504.1.01.0021.03.00 | Hook | 1 |
| 78 | 503.1.08.001.04.00 | Controller Assembly | 1 |
| 79 | 504.2.01.0015.01.00 | LED Light | 1 |
| 80 | 504.4.04.011.02 | Battery Pack | 1 |
| 81 | 504.3.01.03.0420.01 | Countersunk Screw ST4.2x20 | 3 |
| 82 | 504.3.01.01.0535.01 | Hex. Socket HD. Bolt M5x35 | 2 |
| 83 | 504.2.02.0002.03.04 | Left Handle | 1 |
| 84 | 504.3.01.04.0406.01 | Bolt M4x6 | 1 |
| 85 | 504.2.04.0003.01.01 | Lock Bolt | 1 |
| 86 | 504.3.04.01.0600.00 | Washer d=6 | 1 |
| 87 | 504.2.01.0037.01.01 | Fixed Block | 1 |
| 88 | 504.1.04.0023.01.02 | Catch Spring | 1 |
| 89 | 504.1.01.0034.01.00 | Catch | 1 |
| 90 | 504.3.04.01.0400.00 | Washer d=4 | 1 |
| 91 | 504.3.01.03.0408.01 | Screw ST4.2x8 | 1 |
| 92 | 505.04.002.00.999 | Warning Lable | 1 |
| 93 | 504.1.03.0007.01.02 | Deformed nut | 2 |
| 94 | 504.3.04.01.0400.00 | Coil spring next gasket do=10.5 | 1 |
| 95 | 504.2.01.0029.01.00 | Ribbon Spring Shaft | 1 |
| 96 | 504.1.04.0017.02.01 | Ribbon Spring | 1 |
| 97 | 504.1.01.0035.01.00 | Coil spring on gasket do=4.8 | 1 |
| 98 | 504.2.01.0030.01.01 | Fixed Stuff | 1 |
| 99 | 504.3.06.01.0320.01 | Parallel Pins 3x20 | 1 |
| 100 | 504.1.06.0004.02.09 | Nail Magazine | 1 |
| 101 | 504.2.01.0031.02.01 | Nail Feeder Seat | 1 |
| 102 | 504.1.04.0024.01.02 | Nail Feeder Spring | 1 |
| 103 | 504.1.03.0004.02.02 | Nail Feeder | 1 |
| 104 | 504.3.01.01.0510.01 | Hex.Socket HD.Bolt M5x10 | 6 |
| 105 | 504.1.03.0006.01.02 | Nail groove fixed frame | 1 |
| 106 | 504.1.03.0009.01.02 | Guide | 1 |
| 107 | 504.2.01.0047.01.00 | Dust plate | 1 |
| 201 | 503.1.01.001.01 | Motor Assembly | 1 |
| 202 | 503.1.02.0001.02 | Wind leaf component | 1 |
| 203 | 503.1.25.003.01 | Chamber components | 1 |
| 204 | 503.1.05.006.01 | Chassis components | 1 |
| 205 | 503.1.19.003.01 | Nail groove components | 1 |
| 501 | 504.4.04.013.02 | Charger components | 1 |
| 501-1 | 504.4.04.010.01 | Charger Base | 1 |
| 501-2 | 504.4.04.009.01 | Adapter | 1 |
| 502 | 503.1.13.002.01 | Case Assembly | 1 |
| 503 | 504.6.01.001.01 | Safety Glasses | 1 |
| 504 | 504.6.02.002.01 | Hex.Bar Wrench M5 | 2 |
| 505 | 504.6.03.001.01 | Oiler | 1 |